

# Premier Gutter Cover - Installation Instructions

[www.premierguttercover.com](http://www.premierguttercover.com) to print PDF and see pictures

## 1. GUTTER PREPARATION

- A.) Clean and flush ALL gutters and downspouts that are to be protected with *Premier Gutter Covers*.
- B.) We recommend that repairs and replacing gutters and downspouts as needed.
- C.) We recommend verifying ALL gutters and downspouts are installed correctly for proper flow and drainage (no standing water)
- D. 3" x 4" downspouts with proper outlets are recommended.

## 2. GUTTER COVER PREPARATION

- A. Count and prefabricate: *pictures at bottom of page*
  - (1). Inside corners (see "inside" pictures) and PDF for high flow
  - (2). Outside corners (see "outside" pictures)
  - (3). High flow Valley's inside corner or add 4" piece of Premier's louvered section above inside corner to double flow capacity "web site" Pictures- and print pdf inside corner procedure.


3. **INSTALLATION** -All Premier's must be installed with at least one inch (1") of louvered screening exposed for water to pass through, beginning at the front flat sheet portion to the front gutter edge where cover is fastened.

**NOTE; Install Premier Gutter Covers to the gutter only never penetrate, drill, or secure Premier Gutter Covers to the roof or structure of a home.**

- A. *Premier Gutter Covers* must be installed under the starter course of composition roofing if possible.( Do not rip tar paper) If not possible, it is then acceptable to install *Premier Gutter Covers* under first layer of tabs. At least 1 inch of flat metal under roofing is required.
- B. Fasteners should be used to install Premier Gutter Covers by securing it to the outside lip of gutter through perforated metal (3 to 4 fasteners per section) stainless steel, aluminum or properly coated screws only, to avoid electrolysis.
- C. Install ALL outside corners, inside corners, and or deflectors as needed
  - NOTE; Never installed as to allow water to back up under roofing and cause water damage to home structure (In rare cases Gutter is higher than roof edge).**
- E. Install balance of covers, overlapping each cover 1/2" - 3/4"
  - (1). Trim final *Premier Gutter Cover* to proper length at end of each gutter section
  - (2). Be sure to bend *Premier Gutter Cover* at v-groove line to match pitch of roof.
- F. *Premier Gutter Cover* have a low profile.
  - (1). A slight pitch forward is needed for proper drainage (more than horizontal) minimum of 1/2 Inch from lowest portion of roof to outside edge/ lip of gutter
    - NOTE; Never create a valley on Premier Gutter Cover surface that can hold or basket debris, or cause water to back up or flow toward roof, water must flow away.**
    - (2). Handle mesh section with care. It **must** remain **without** wrinkles (properly louvered).
    - (3). Bend over flat metal at ends inside gutter as some water may travel down v-groove and needs to drain in gutter. Be sure to seal ends tight enough to keep out ALL small animals as well as leaves and debris. Recommend end caps installed.

4. **ANNUAL INSPECTION** should be performed for any damage and debris build up. (Roof Valleys should be cleaned as needed) **NOTE** electrolysis can occur from using other than stainless steel or properly coated fasteners to the gutter surface, *Premier Gutter Cover LLC* will not be responsible for such damage.

**Warranty on other side and voided if Premier Gutter Covers and accessories are installed improperly.**

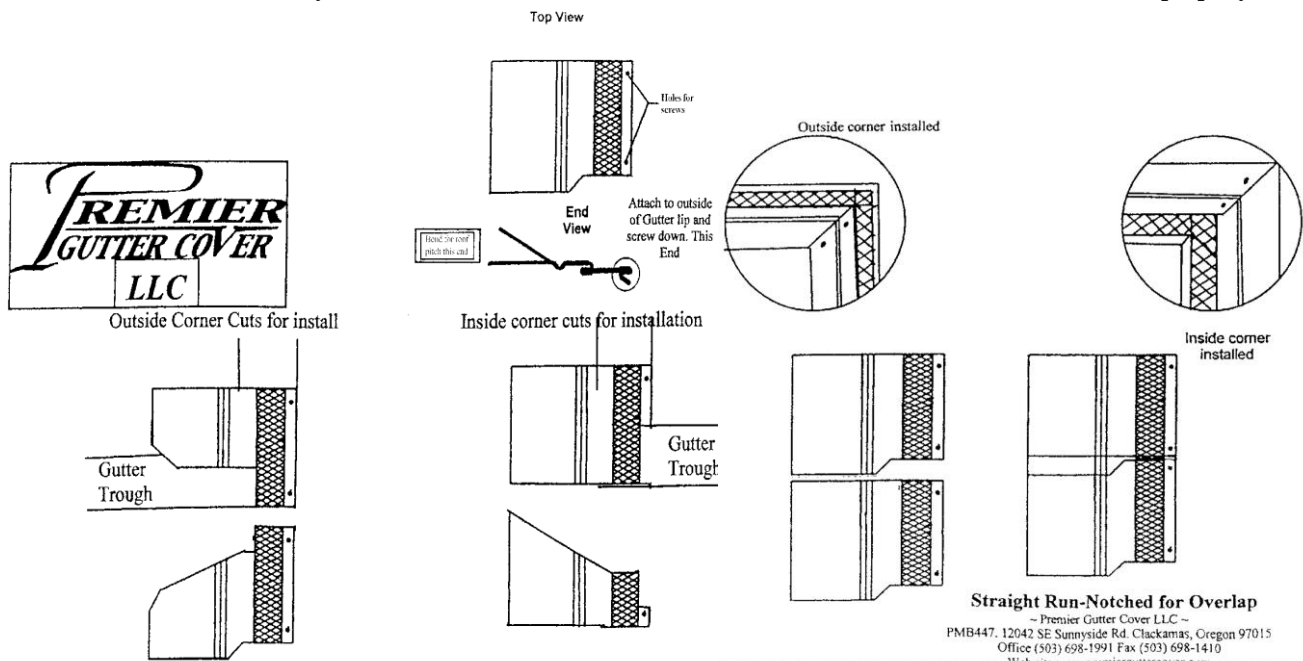

## **LIMITED WARRANTY**

Premier Gutter Cover LLC, warrants that under normal, natural elements of nature, (sunlight, rain, snow, ice, etc.) And when properly maintained, Premier Gutter Cover LLC will not peel, crack, chip or blister for a period of twenty (20) years (finish only).

Premier Gutter Cover LLC has provided this standard limited warranty. A Limited Warranty of performance and proper installation can only be issued by a factory certified and registered approved installer. Premier Gutter Cover LLC has no control over the installation of this product. Any unauthorized modification to the Premier Gutter Cover LLC system which is not authorized in the Installation Instructions and or adversely affects the product's performance or improper installation of Premier Gutter Cover will terminate Premier Gutter Cover's responsibilities under this limited warranty.

Manufacturer shall from time to time advise Supplier in writing of the warranty or warranties applicable to the products. Supplier or Installer is expressly prohibited from extending any warranty or warranties on behalf of Manufacturer to any person.

THERE SHALL BE NO OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS OR ANY OTHER OBLIGATION ON THE PART OF MANUFACTURER WITH RESPECT TO ANY OF THE PRODUCTS EXCEPT THE WARRANTY OR WARRANTIES EXTENDED PURSUANT TO THIS AGREEMENT..

In any event and notwithstanding anything in this instrument to the contrary, Manufacturer's liability under any warranty shall be discharged by replacing not repairing any part or parts which may prove defective under normal or proper use, within the effective period of the warranty, if shown to be defective by proper evidence submitted to Manufacturer this would include and not limited to Bill of sale, Warranty (properly completed) and defective product. Manufacturer shall have no liability whatever for any incidental or consequential damages. (i.e. dry rot, mold, mildew, etc.) or effects from Severe weather & natural disasters (fire, tornado, earthquake, golf ball hail and any acts of God).

It is expressly agreed that any and all warranties and/or guarantees as dated shall immediately cease and terminate, notwithstanding anything in this instrument to the contrary, in the event that any parts and/or structural components or appurtenances thereto are altered or modified by Supplier, Installer or the user of the Products without the expressed written consent of Manufacturer Premier Gutter Cover LLC.

-----  
This Warranty must be registered with manufacturer within 30 calendar days of installation to be activated and considered valid for any credits or compensations made as a result from a claim.

Authorized Installing Agent / Company \_\_\_\_\_

Name of Customer \_\_\_\_\_

Installation address \_\_\_\_\_

Date of installation \_\_\_\_\_ Qty. (feet installed) \_\_\_\_\_

Mail completed document to bellow address within 30 days of install for activation of above Warranty

~ Premier Gutter Cover LLC ~  
PMB447, 12042 SE Sunnyside Rd. Clackamas, Oregon 97015  
Office (503) 698-1991 Fax (503) 698-1410